Adding Pneumatic Preset Counter Type 497



VARIABLE PILOT SIGNAL

TECHNICAL DATA

- Continuously visible preset
- Integrated pneumatic reset
- 3 or 5-digit display
- Convenient button setting

Using two pneumatic preset counters it is possible to implement pilot signals with values ranging from 1 to 99.999. These counters are especially suitable as controlling elements for semi-automatic or fully automated processes. This applies both to varying preset/setting values and to values which remain the same for a long period.


| Display | 3 or 5-digit indication of count and preset value, | | | |
|----------------------------|--|--|--|--|
| | depending on version | | | |
| Digit height | 4 mm | | | |
| Service pressure | 2 8 bar | | | |
| Air quality | oilfree | | | |
| Filter pore width | < 40 μm | | | |
| Operating temperature | 0 + 60 °C | | | |
| Connection | hose coupler M5 or rapid-fit connection | | | |
| | (depending on version) | | | |
| Mounting | front panel | | | |
| Mounting position | horizontal roller axis | | | |
| Protection class (IEC 144) | IP 40 with hoses connected; for higher degree or protectio | | | |
| | we recommend clear covers | | | |
| Count input | adding | | | |
| Min. pulse length | 8 ms | | | |
| Max. counting frequency | 20 Hz | | | |
| Pulse duty factor | 1:1 | | | |
| Reset | - manual with button | | | |
| | - by external pneumatic signal, Min. pulse length 180 ms | | | |
| | - automatic reset after preset has been reached | | | |
| | (only in version with automatic reset) | | | |
| Reset frequency | max. 1 per 2 s | | | |
| Signal duration | from when preset has been reached until reset; at 3 bar, | | | |
| _ | counter with automatic reset 300 340 ms | | | |
| | | | | |


Attention! Minimum time period between last count pulse and pneumatic reset is 50 ms.

Type 497

DIMENSIONED DRAWINGS


Technical data

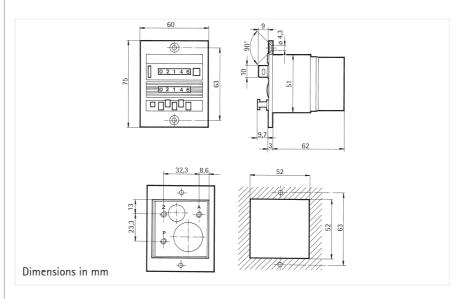


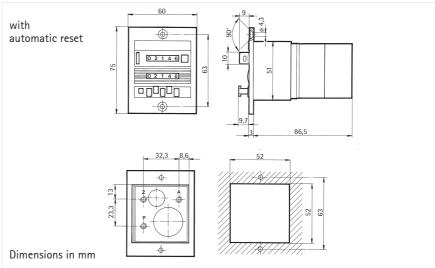


Technical data

CONNECTION DIAGRAMS

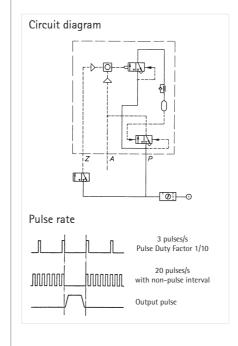

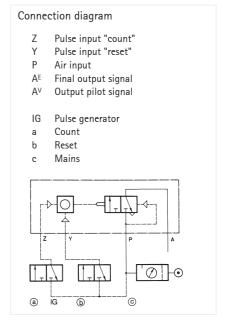

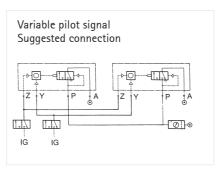



ORDER INFORMATION Counter

Standard accessories

| | Button and pneum. reset | | with automati reset | С |
|---------------------|-------------------------|-----------|------------------------|-----------|
| Connection | 3-digit | 5-digit | 3-digit | 5-digit |
| | | | | |
| Hose coupler M5 | 0 497 619 | 0 497 486 | 0 497 493 | 0 497 472 |
| Rapid-fit connector | 0 497 618 | 0 497 487 | 0 497 479 | 0 497 473 |